

DECORATIVE WOOD BURNING TOOL

Directions

1. Use pliers to screw points into end of burner pen.
2. Plug in burner and switch on to heat.
3. Place in stand and wait 10 minutes for burner to heat.
4. Hold burner like you would a pencil.
5. Holding burner too tightly will cause fingers to get hot.
6. Do not touch point or metal parts of burner when hot.
7. Turn off and allow to cool down before changing point.
8. Do not use near water.
9. Tips: To sharpen or clean, use a fine emery board.

Stencil Cutter


Easy to use curved tip is great for small, intricate designs. Straight tip is great for broad or straight cuts.

1. Tape the stencil blank over the design and trace the pattern with a permanent marker.
2. Practice first! Hold the cutter like a pen and trace the pattern using light pressure. Too much pressure may bend or break the tip. To protect your table while you cut, use the glass from a picture frame.
3. Pace yourself! Moving too quickly or slowly will cause uneven melting. For smooth cut edges, do not abruptly lift tip up while in the middle of tracing a line.

Wood Burner

1. Use a scrap piece of wood to practice using the burner.
2. Points react differently to different types of wood.
3. Go slowly to achieve darker lines.
4. Move wood piece as you work.

Find more projects & inspiration at

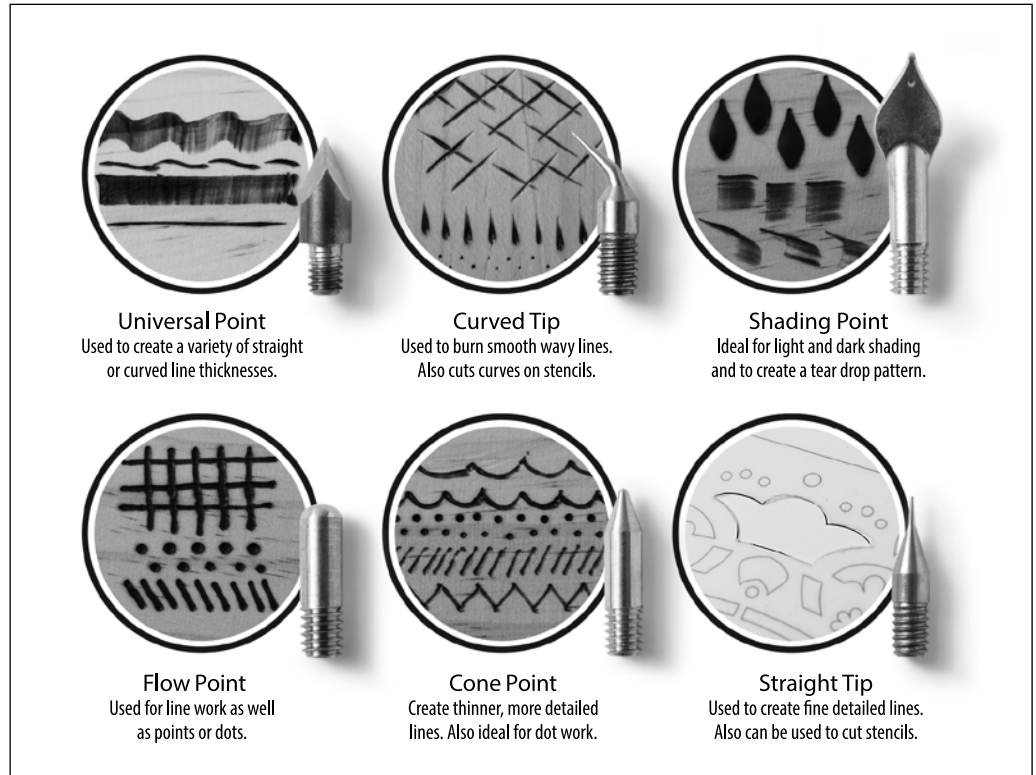

Universal Point
Used to create a variety of straight or curved line thicknesses.

Curved Tip
Used to burn smooth wavy lines. Also cuts curves on stencils.

Shading Point
Ideal for light and dark shading and to create a tear drop pattern.

Flow Point
Used for line work as well as points or dots.

Cone Point
Create thinner, more detailed lines. Also ideal for dot work.

Straight Tip
Used to create fine detailed lines. Also can be used to cut stencils.

WARNING: CHOKING HAZARD—Small parts
Not for children under 3 years.

CAUTION: Hot Tool can cause severe burns. Use carefully and keep away from combustible materials. Not suitable for children under 12 years of age. Parental supervision is required. Not to be used as a toy.

©2010, 2016 PLAID ENTERPRISES, INC. • P.O. BOX 7600 • NORCROSS, GA 30091-7600
(800)842-4197 • MADE IN CHINA • 09/16

